


# INSTRUCTION

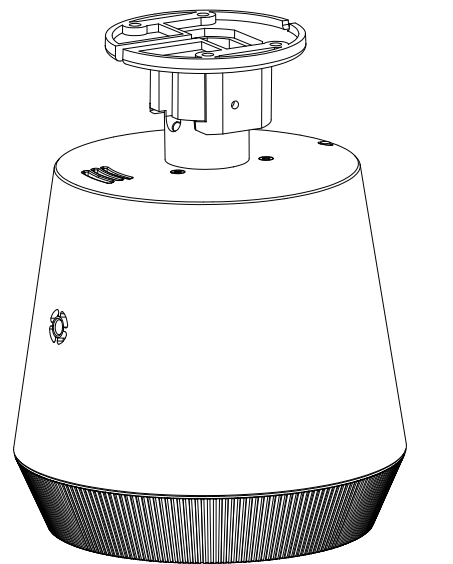

## User Manual for Ceiling Machine Products

### Product Introduction

The industry's first dual-purpose ceiling diffuser that does not require climbing. It can easily and efficiently change oil without climbing. It adopts two-fluid micro-nano atomization technology and innovative ultra-quiet atomization technology. The built-in IoT PCB smart program can be remotely controlled through the Internet using the APP. It can be mounted on the ceiling, placed on the guide rail, or hung on the wall. It is safe and does not take up space. The main function is to create different fragrance styles for life. The product has a stylish appearance and accurate and stable fragrance expansion. It is suitable for KTV, sales offices, shopping malls, 4S stores, homes, health clubs and other places.

### Notice

Please read this instruction manual carefully before using the equipment and keep it in a safe place.


- Do not use overloaded power sockets, damaged power cables or adapters, otherwise your safety may be endangered. To avoid fire hazards; please replace them in time if found.
- If you are not a technician, please do not try to modify, disassemble, or repair the equipment to avoid damage to the equipment. If the equipment is abnormal, please check whether it is operated according to normal usage requirements or follow the troubleshooting instructions. If the problem cannot be solved, please contact sales in time.
- The equipment must not be inverted or tilted when in use. If the equipment needs to be transported to other locations, please maintain and clean the equipment first (see Equipment Maintenance for details) before packaging and transporting, avoiding essential oil penetration and damage to the equipment.
- Please maintain and clean the equipment regularly to ensure that the equipment is in optimal working condition.

### Instructions for refilling essential oil

- Before refilling essential oils, stop the device for 2 minutes, and unscrew the essential oil bottle after the essential oil flows back inside the atomizer head.
- It is recommended to control the amount of essential oil added within 45 days each time to avoid deterioration of essential oils due to oxidation. Control panel


### Product parameters

model	M45 (Ceiling version)
Dimension	W147*D147*H188.5(mm)
Capacity	350ml
N.W	0.61KG
Coverage	500m <sup>3</sup>
Voltage	DC12V-1A
Power	8W
Noise	≤35dB
Packaging size	W167*D167*H215 (mm)

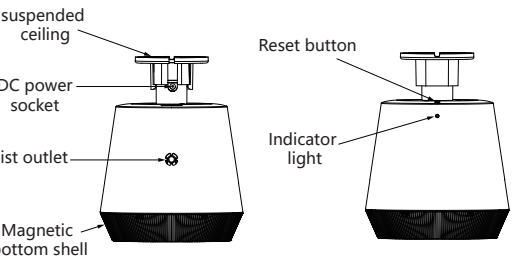

### Product parameters(Without climbing version)

Dimension	W147*D147*H188.5(mm)
Capacity	300ml
N.W	0.64KG
Coverage	500m <sup>3</sup>
Voltage	DC12V-1A
Power	8W
Noise	≤35dB
Packaging size	W167*D167*H215 (mm)
No-climbing range	About 3-4 meters high (pole length 2 meters, plus the height of a person raising his hand)

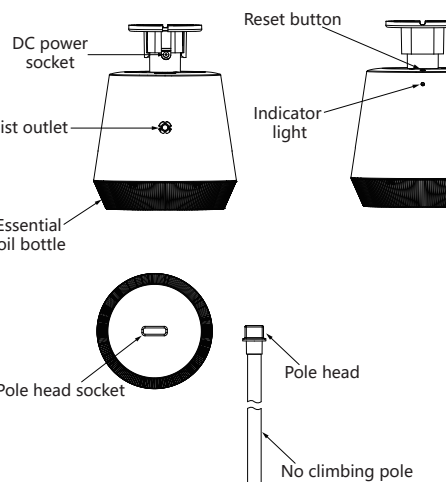

### Parts

Name	Adapter	Product manual	Instruction manual APP operation	Atomizer core	Flat washer	Screw/ expansion nail	Fixed needle
Thumbnail							

### Installation Guide

- Use the screw holes of the machine pendant to make positioning marks, drill holes with a diameter of 8mm according to the marks, and insert the 4 glue pulls in the accessory bag.
- Use the 4 self-tapping screws in the accessory bag to fix the machine pendant.
- After the machine is plugged in, insert the top of the machine horizontally into the machine pendant slot and push it to the bottom.
- Finally, use the fixing pin in the accessory to horizontally penetrate the side hole of the machine pendant to complete the installation.

### Settings

- Connect the device to a power socket and turn on the power. Turn on Bluetooth on your phone and open the connect APP.
- For the first time connecting to Bluetooth, reset the device first, press and hold the reset button for 10 seconds, and then search for the device on the APP.
- Click Add Device on the APP homepage and select the machine. After the connection is successful, you can change the machine name and change the working settings.
- For APP configuration and operation, please refer to the APP operation manual.

### Tips

A time slot can only control the time of one day (the system's day is from 00:00 to 23:59). If you need to span across midnight of the next day, you need to use two time slots to set it up. For example, the working hours are from 19:00 that day to 03:00 the next day. The setting method is as follows: the first time slot is 19:00-23:59, and the second time slot is 0:00-03:00. Note that the working hours cannot be repeated in the time slots, otherwise the system cannot recognize it.

### Ordinary version oil filling steps

- Rotate to remove the magnetic bottom shell.
- Rotate to remove the essential oil bottle and add essential oil.
- Install the essential oil bottle and replace the magnetic bottom shell.



### Equipment maintenance

In order to ensure the best fragrance diffusion effect, please check and maintain the equipment every six months. When a new fragrance needs to be replaced or the fragrance diffusion effect is weakened, the equipment should also be maintained:

- Unscrew the used essential oil bottle.
- Pour an appropriate amount of alcohol into the essential oil bottle and clean it.
- After cleaning, pour a small amount of alcohol, install the essential oil bottle on the equipment, and turn on the equipment for 5 to 8 minutes.
- After cleaning the equipment, turn off the power.

### Troubleshooting

Before preparing to repair the equipment, please first try to solve the following problems according to the following methods.

Problem	Solution	Problem	Solution
Equipment does not work	<ul style="list-style-type: none"><li>Please check whether the power adapter is the input voltage and input current required by the machine, and the DC end has been correctly inserted</li><li>The working program set by the equipment, whether it is currently in working time</li></ul>	Oil leakage	<ul style="list-style-type: none"><li>Are the essential oil bottle and the atomizer head tightened</li><li>Is the atomizer head seal deformed or damaged</li><li>Is the atomizer head damaged</li></ul>
No atomization, small atomization	<ul style="list-style-type: none"><li>Is the air pump working, and whether there is airflow at the mist outlet</li><li>Are the atomizer core and oil suction pipe loose or blocked</li><li>Is the air nozzle seal damaged and detached</li></ul>	Abnormal noise	<ul style="list-style-type: none"><li>The air pump is loose, re-fix the air pump.</li><li>The air pump is damaged, replaced with a new one.</li></ul>

### After-sales service

The equipment is under warranty for one year from the date of sale and shipment, but the outer shell, power supply, wire and external sealing ring and other wearing parts are not covered. Damage caused by human or accident is also not covered by the warranty. Paid repairs are implemented beyond the free warranty period. If you encounter any after-sales problems, please contact the authorized sales service providers in each region, or contact our company's sales center.

### Warranty card

This warranty card is a quality guarantee and must be filled out truthfully.

Warranty card 1		Warranty card 2	
Warranty date		Warranty date	
Fault description		Fault description	
Verification date		Verification date	
Maintenance results		Maintenance results	
Maintenance personnel signature		Maintenance personnel signature	